

Firestone's air compressors are included in most Air Command™ systems but may also be purchased separately. All Firestone compressors are direct drive compressors (no oil or belts), so the compressors can be mounted in any position. Compressors should be mounted in a clean air location.



9377

L	W	H
7.63	2.11	4.31



9284

L	W	H
6.30	3.27	5.20



9285

L	W	H
8.25	3.94	6.34



9287

L	W	H
11.24	3.94	6.85



2559

L	W	H
8.4	3.75	7



2569

L	W	H
8.4	2.99	6.42



9164

L	W	H
12.54	5.65	8.86

TECH TIP

Do Not Submerge.

The compressors are designed to withstand the normal driving conditions of debris and moisture. Care should be taken that the compressors are not submerged into water.

Air Compressor Description	Part No.	Max. Air Pressure	Duty Cycle	Max. AMP Draw	0 - 30 PSI*	0-60 PSI*	Wty** (yr)	Repl. Filter	CFM @ 100 PSI*
Light Duty (Not for use with air tanks)	9377	120 PSI (8.3 BAR)	9%	10 AMPS	17 sec.	42 sec.	1	9129 ⁺	.32
Standard Duty (Use with up to 1 gallon tank)	9284	130 PSI (9.0 BAR)	15%	20 AMPS	13 sec.	30 sec.	1	9350	.57
Heavy Duty (Use with up to 3 gallon tank)	9285	150 PSI (10.4 BAR)	30%	18 AMPS	10 sec.	24 sec.	2	9418	.74
High Performance (Use with up to 6 gallon tank)	2559	175 PSI (12.0 BAR)	50%	27 AMPS	9 sec.	18 sec.	2	9428	.95
Super Performance (Use with up to 6 gallon tank)	2569	300 PSI (20.7 BAR)	50%	35 AMPS	8 sec.	16 sec.	2	9428	1.09
Xtreme (Use with up to 6 gallon tank)	9287	100 PSI (6.9 BAR)	100%	23 AMPS	7 sec.	18 sec.	2	–	.94
Xtreme -alt (Use with up to 6 gallon tank)	9164	100 PSI (6.9 BAR)	100%	28 AMPS	–	–	2	–	1.10

*Indicates flow rate - how long it takes to fill 1/2 gallon air tank.

** See product-specific warranty guidelines for more information regarding warrantable manufacturing defects.

⁺Packs of 10 filters.